




THE ORIGINAL SLIDING SCREEN DOOR INSTRUCTIONS WILL BE NEEDED FOR INSTALLATION ALONG WITH THE FOLLOWING SUPPLEMENTAL INSTRUCTIONS. READ BOTH SETS OF INSTRUCTIONS PRIOR TO INSTALLATION.

### IDENTIFY PARTS IN FRENCH DOOR KIT




ADDITIONAL SCREWS NEEDED FOR INSTALLATION ARE FROM THE ORIGINAL DOOR KITS.

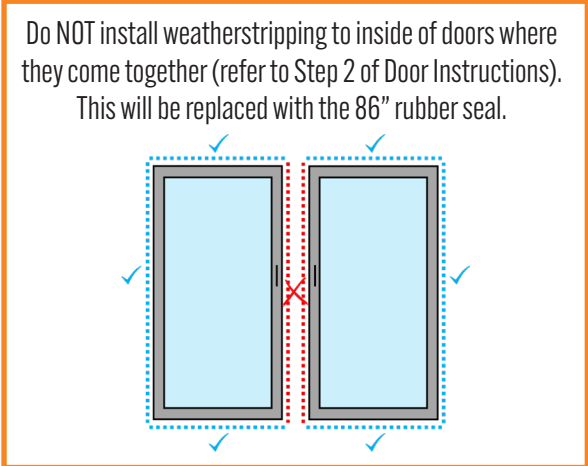


### STEP 11a: INSTALL SPACER TO HEADER

Slide the 1/2" pieces of weatherstrip into each slot on spacer. Then, secure spacer to centerline of door opening with two 1" pan head stainless steel screws. The bottom of spacer is secured at 81 1/2" above finished floor. This spacer will act as a guide for your glide base placements. Read Steps 9 and 10 of our Original Sliding Screen Door Instructions and attach the ball bearing side to doors for glide left and right. Make sure you have each base piece identified.

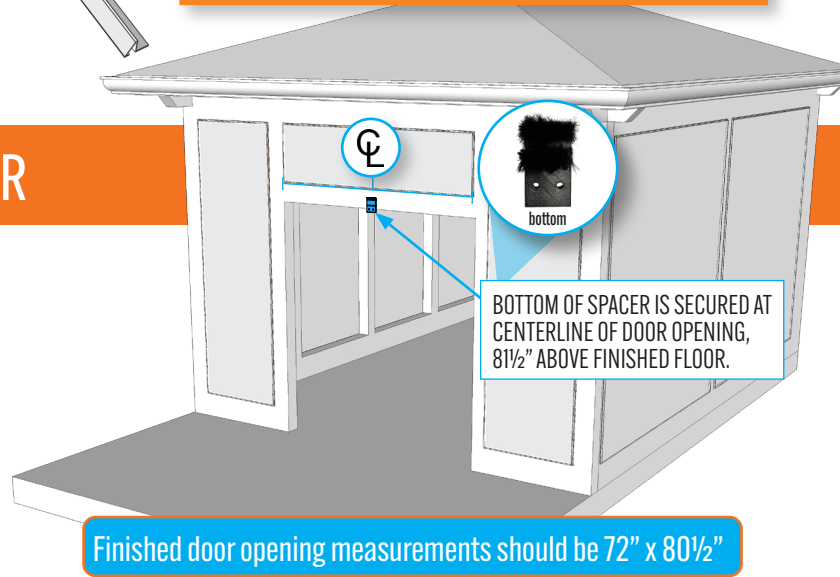

### STEP 12a: ATTACH EACH GLIDE BASE TO TOP OF DOOR JAMB

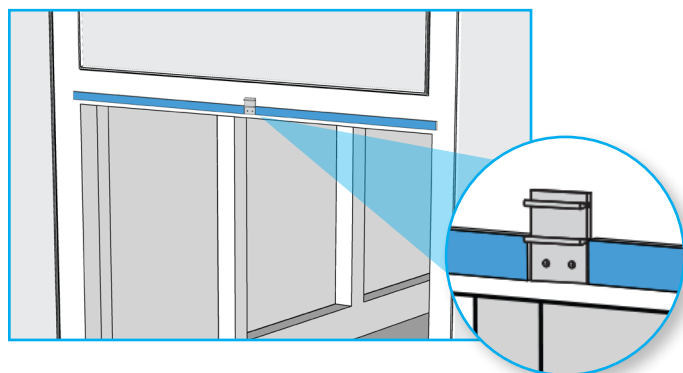


Using the spacer as your placement guide, position the open ends of each glide base adjacent to each side of the installed spacer. Both glide bases need to align on the sides and be level with the bottom of the spacer as illustrated. Use three 1" stainless steel Tek screws from Door Kits to attach each glide base. Continue with Step 12 in the Original Sliding Screen Door Instructions for attaching each glide base.

## STEP 13a: INSTALL 72" THRESHOLD

YOU WILL NOT USE 36" THRESHOLDS

Install the precut 72" threshold. This threshold does not receive weatherstripping. Use five 1/4" color matched screws from Door Kits and secure to finished floor.

[Return to Original Sliding Screen Door Instructions at Step 14.](#)

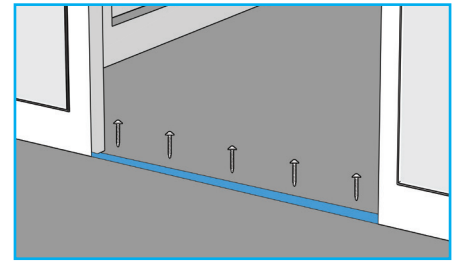


## STEP 15a: ADD WEATHERSTRIPPING ON BOTH 70" THRESHOLDS AND INSTALL

Clean area that receives weatherstrip before application to ensure a proper grip. Six screws will be used to secure thresholds.


[Return to Step 15 from Original Sliding Screen Door Instructions.](#)

Thresholds should be straight and parallel.

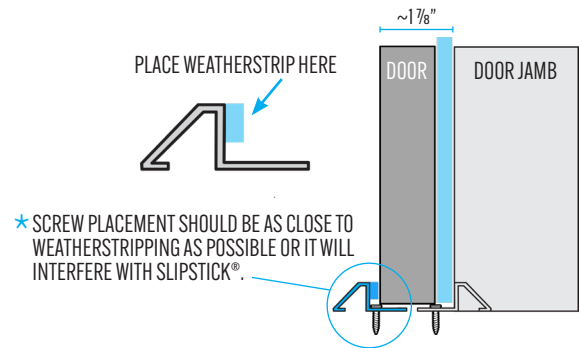


## STEP 16a: INSTALL DOOR STOPS

Install left and right door stops with 1 1/4" screws from Door Kits. [Return to Step 17 of Original Sliding Screen Door Instructions.](#)

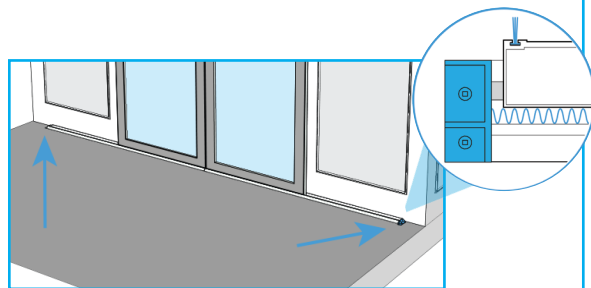

## STEP 18a: SECURE RUBBER SEAL TO DOOR EDGES

Separate rubber seal into two single strips. Clean area that receives seal before application to ensure a proper grip. Attach seal as illustrated below.

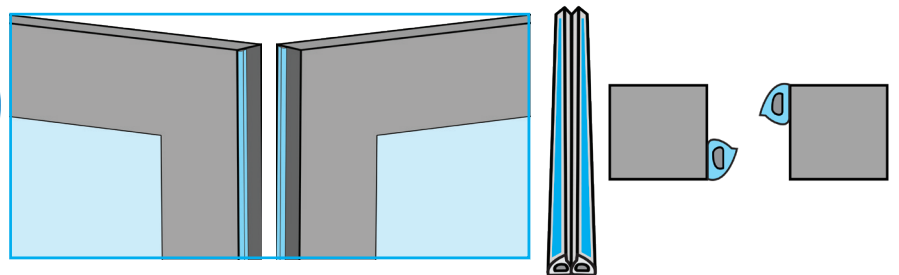

## STEP 19a: OPTIONAL FRENCH DOOR LATCH

Secure using four 1/2" stainless steel Tek screws from Door Kits.

