

STANDARD PACKAGING: 5 PIECE TUBE | 5 ALUMINUM BASES + 5 VINYL CAPS + SCREWS

SCREENEZE®

LENGTHS: 8' & 12'

5PC 8' TUBE = 40 LINEAR FT (INCLUDES 50 SCREWS)
 5PC 12' TUBE = 60 LINEAR FT (INCLUDES 75 SCREWS)

HOW MANY PIECES DO YOU NEED?

Hopefully you have designed your porch to take advantage of SCREENEZE®'s capacity for larger openings. We find it best to draw each opening so that you can write all of your measurements down. Do not worry about your drawing being to scale or measuring to the exact inch. This is for estimating purposes. A part of being able to install SCREENEZE® is being able to estimate what you need. Since all sales are final, we believe that it is in your best interest that you do the estimating. We are always happy to help you with your estimate, but the final decision on how much to purchase is yours to determine.

SNAPTRACK


LENGTHS: 4', 6' & 8'

5PC 4' TUBE = 40 LINEAR FT (INCLUDES 35 SCREWS)
 5PC 6' TUBE = 40 LINEAR FT (INCLUDES 50 SCREWS)
 5PC 8' TUBE = 40 LINEAR FT (INCLUDES 75 SCREWS)

LET'S LOOK AT AN EXAMPLE: TIMBERHILL ESTATES SCREEN PORCH PROJECT

1. HOW MANY PANELS DO YOU HAVE?

- a. Draw each opening and label them beginning with the number "1."
- b. You will refer to the top as "T." Right side as "R." Bottom as "B." Left side as "L."
 i. For example: the top piece would be labeled "1T", right side piece is "1R" and so on...

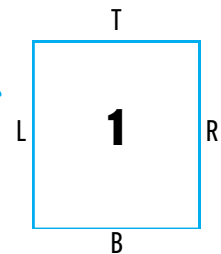

2. MEASURE EACH OPENING AND RECORD IT ON YOUR DRAWINGS.

3. NEXT, LOOK AT EACH PANEL AND DECIDE HOW MANY 8' AND 12' LENGTHS ARE REQUIRED.

- a. Remember these tips:
 - i. Continuous pieces are the easiest to install, but spliced pieces work too;
 - ii. Off fall cuts can be used for smaller openings, such as above your door;
 - iii. Call your supplier and find out what they stock;
 - iv. A 96" finished opening requires a 97 1/4" piece of SCREENEZE® on a Corner Mount install OR the use of a Corner Plinth (sold separately);
 - v. SEE EXAMPLE BELOW.

EXAMPLE PORCH PROJECT

PROJECT NAME:
 TIMBERHILL ESTATES
 SCREEN PORCH

SYSTEM USED:
 SCREENEZE®


MOUNTING TYPE:
 SCREENEZE® CORNER MOUNT

STRAIGHT OR MITER CUTS:
 MITERED CORNERS

SCREEN FABRIC TYPE:
 TUFFSCREEN #1713 72"X100'

TOTAL #OF PANELS/OPENINGS:
 9 PANELS/OPENINGS

AFTER CALCULATING, YOU CAN ADJUST,
 IF NECESSARY, TO ACCOMMODATE THE
 STANDARD 5-PIECE TUBE PACKAGING.

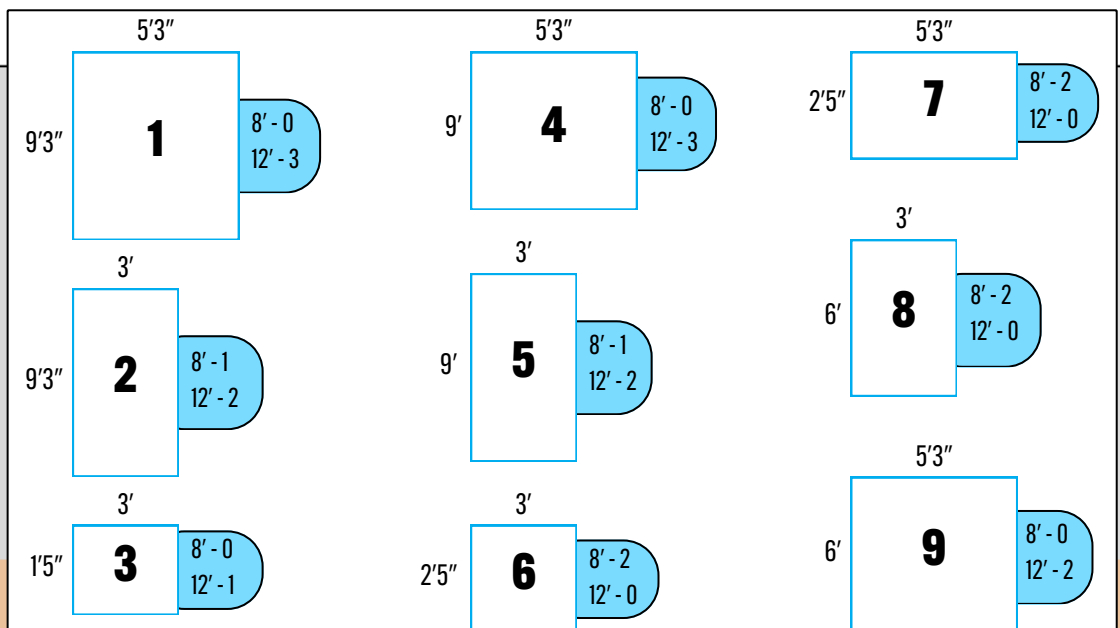

TOTAL NUMBER OF 8' PCS: 8 **TOTAL NUMBER OF 12' PCS: 13**

DO I NEED PLINTH KITS?

1. ARE YOU DOING MITER CUTS OR STRAIGHT CUTS?

- a. Miter Cuts = DO NOT ORDER PLINTH KITS
- b. Straight Cuts = ORDER PLINTH KITS

2. WHAT TYPE OF PLINTH KIT DO I ORDER? FLUSH OR CORNER?


- a. SCRENEZE® Flush Mount Installation = ORDER PLINTH FLUSH KITS
- b. SCRENEZE® Corner Mount Installation = ORDER CORNER PLINTH KITS
- c. SNAPTRACK Face Mount Installation = ORDER CORNER PLINTH KITS

3. WHAT IS INCLUDED IN A PLINTH KIT?

- a. Corner Plinth Kit = 4 Corners + 4 Screws
- b. Flush Plinth Kit = 4 Corners + 4 Bases + 12 Screws

4. HOW MANY KITS DO I ORDER?

- a. One Kit Per Opening
- b. Using the previous example, this project would require 9 Plinth Kits because there are 9 openings. We would recommend ordering 10.

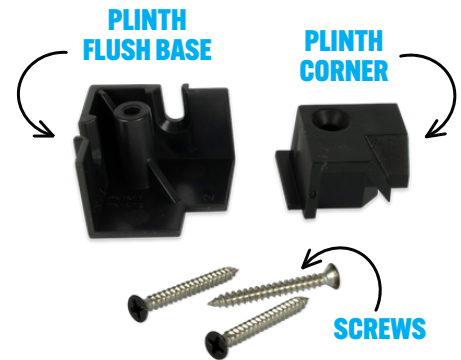

HOW MUCH SCREEN FABRIC DO I NEED?

1. SCREEN IS TYPICALLY SOLD IN A 100' ROLL - SOLD SEPARATELY.

- a. The recommendation would be to order a screen size large enough that you will be left with 2-4" of excess screen all the way around each opening to trim off at the end of your installation.
- b. For a full list of compatible screen fabric, visit our [website](#).